



Advanced Innovative Machinery

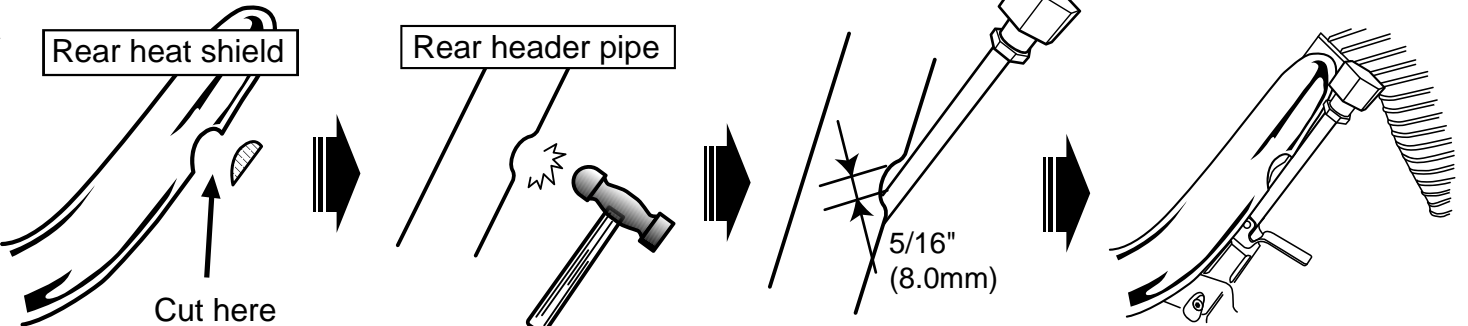
Supplement

•Reverse Gear MAMBA (All models)

Read and become familiar with these installation instructions before start.

Softtail models

Some Softtail models may be required following pipe modifications

1. 

Rear heat shield

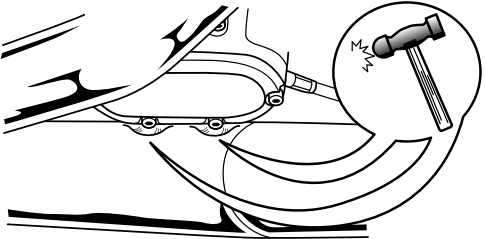
Rear header pipe

Cut here

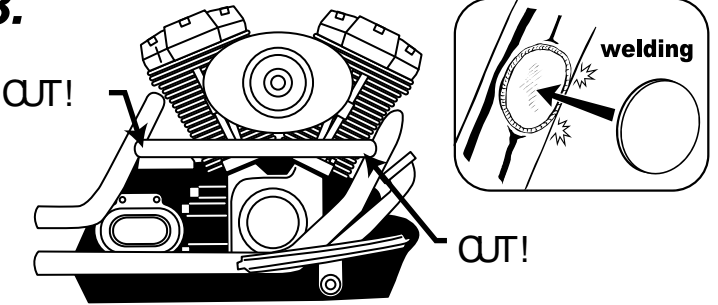
Dent the rear pipe to clear the shift lever.

5/16" (8.0mm)

Clearance should be more than 5/16" (8.0mm) between shifter lever and rear pipe.

2. 

Dent the front pipe to clear the bolts.

3. 

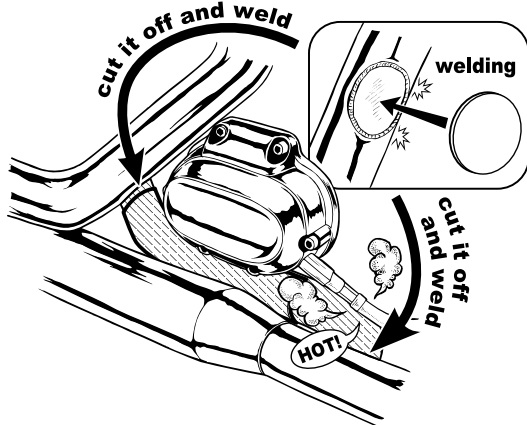
CUT!

welding

CUT!

Cut the crossover pipe off. Plug the holes.

Dyna models



Some Dyna models may be required to cut the crossover pipe off and plug the holes to clear the side cover and gear housing.



Advanced Innovative Machinery

AIM Corp.
16631 Gemini Lane
Huntington Beach, CA 92647
Phone: 714-848-3030 Fax: 714-848-3031

E-mail: info@aim-tamachi.com

www.aim-tamachi.com